China

MINKO

CE, ROHS

Wallbox-M11

AC 400V Three Phase Type2 Wallbox EV Car Charger 8-16A Adjustable Electric Vehicle Charging Pile

Basic Information

- Place of Origin:
- Brand Name:
- Certification:
- Model Number:
- Minimum Order Quantity: 5 pieces
- Price:

M

MINKO

- Packaging Details:
- Delivery Time:
- Payment Terms: T/T, W
- Supply Ability:
- negotiation L210xW85xH52 (mm) 8 -10 working days T/T, Western Union, MoneyGram,Paypal,Skrill,Transferwise 1000000 pieces per month



Product Specification

- Charging Plug:
- Withstand Voltage:
- Input / Output Current:
- Max Output Power:
- Input Cable:
- Work Altitude:
- Stand By:
- IP Level:
- Highlight:

Type 2(Mennekes)		
3000v		
8,10,12,14,16A Adjustable		
11.04 KW		
1M, Hard-wired		
<2000M		

<3W

- IP65
 - 400v wallbox ev charger, 8a wallbox ev charger, 16a electric vehicle charging pile



More Images



Wallbox 11.04 KW Type2 Portable EV Charger, Type 2 16A 3 Phase Wallbox Electric Car Charging Station

Description of Type2 Wallbox EV Charger

This product is mainly composed of charging station host, charging gun, wire, installation backplane, installation ingredients package, etc. It is a household electric vehicle charging equipment. The AC charging station is connected to the mains, the electric vehicle will be safely and reliably charged by the charging gun interface; to avoid afffecting the product performance, should no acid and alkali and other corrosive gases in the surrounding; try to avoid direct rain or use in environments with high humidity, and should try to prevent damage from impacting the housing.

Product parameter description:

Floduct parameter des	•			
Model	M7	M11	M22	
	AC230V / Single	AC 400V / Three	AC 400V / Three	
	Phase	Phase	Phase	
Inour / Ourour Current	8,12,16,20,24,28,32	8,10,12,14,16A	8,12,16,20,24,28,32A	
	adjustable	adjustable	adjustable	
Max Output Power	7.36 KW	11.04 KW	22.08 KW	
Frequency	50/60Hz			
Input Cable	1M, hard-wired			
Charging Plug	Type 2(Mennekes)			
Output Cable	5M			
Withstand Voltage	3000V			
Work Altitude	<2000M			
Stand by	<3W			
Protection	over voltage protection, over load protection, over-temp			
	protection, under voltage protection, earth leakage protection,			
	lightning protection, short circuit protection			
IP level	IP65			
Touch Button	No			
LCD Screen	No			
Current Adjustment	Yes			
Bluetooth APP Charging	gYes / No			
WiFi APP charging	Yes / No			
RFID	Yes			
Timing / Appointment	Yes / No			
Certification	CE, RoHS			

Function introduction of Type2 Wallbox EV Charger 1.Residual current detection (RCD)

Ac leakage protection automatically detects the AC mismatch between the power supply wires,

which indicates that the current fiflows through the grounded (PE) wire. Ac residual current fault protection will trip when the current is 30 Ma.

2.Surge protector

In: 3kA, Imax:6kA

3.Leakage protection

When the leakage protection is started, it needs to be cut offff the power outage and restart.

4. Overcurrent protection

When the current exceeds the early warning value, the charging pile cuts offff the power output, restarts automatically after 10 seconds, and does not recover automatically after 3 cycles until you cut of the power and restart.

5. Overvoltage protection

The protection starts when the voltage exceeds 275V, and automatically recovers when the voltage is restored and stabilized.

6.Undervoltage protection

Start the protection when the voltage is less than 100V, and restore automatically when the voltage is restored and stabilized.

7. Overtemperature protection

Start the protection when the internal temperature of the EV charging station exceeds 85 °C.

Installation Procedure:

- 1. Please use a percussion drill to drill holes according to the cardboard positioning
- 2. Install expansion bolts(6*M6*60MM)
- 3. fix the Mounting backplane with self=tapping screws(6*M5*50mm)
- 4. Align the main unit with the buckle on the back panel and install it, and then use screw to fix(4*M5*40)

Instructions

- 1. When the machine is on standby normally, the indicator light is fixed blue.
- 2. Remove the charging gun from the holder, insert the charging gun into the car charging socket.
- 3. After the gun insertion completed, the vehicle automatically starts to charge normally, and the blue meteor light on.
- 4. The indicator light always turns blue after the charge is completed.





309 West Lake Industrial Zone, Cuishan Road, Dongxiao Street, Luohu District, SZ